



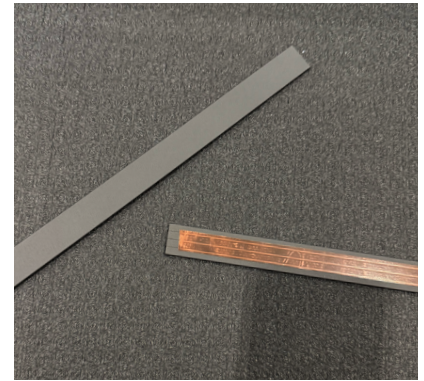

1. Start on the back side of door/glass
2. Measure and mark location to apply divider rail
3. Peel off backer to expose adhesive
4. Place back divider rail between marks
5. Align and apply pressure to activate adhesive
6. Remove any marks with windex and cloth
7. Flip door over to apply front divider rail to glass
8. Align with back divider rail and gently apply pressure to activate adhesive

WATCH OUR QUICK
HOW-TO VIDEO [HERE](#)

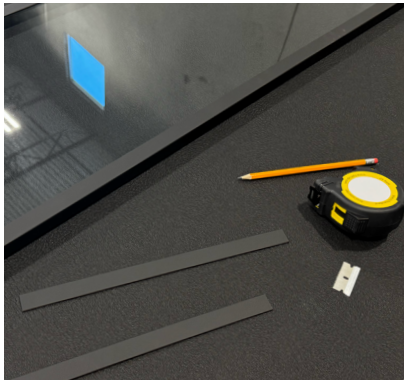

PRODUCT FEATURES

- Available in all specialty coat finishes: Arctic Silver, Black, Bronze Matte, Copper, Gold, Graphite, Luxe Bronze, Modern Brass, & Onyx
- Cut-to-size rails based on door dimensions & profile selected
- Designed for widths up to 48"
- 3/4" (19mm) wide, 1/16" (1.6mm) thick
- Front and back rails provided.
- Flush with frame when installed
- NOT available in Natural Aluminum or Brushed Stainless Finish
- NOT compatible with AF006, AF010 or AF210 profiles

DIVIDER RAIL WIDTH CALCULATOR

Profile	Divider Length Calculation Front	Divider Length Calculation Back
AF002	Door Width - 16.3mm	Door width - 108.3mm
AF003	Door width - 108.3mm	Door width - 108.3mm
AF004	Door width - 28.3mm	Door width - 90.3mm
AF007	Door width - 140.3mm	Door width - 140.3mm
AF009	Door width - 126.3mm	Door width - 126.3mm
AF011	Door width - 113.3mm	Door width - 113.3mm
AF012	Door width - 19.3mm	Door width - 52.3mm
AF013	Door width - 51.3mm	Door width - 51.3mm
AF014	Door width - 8.3mm	Door width - 108.3mm
AF015	Door width - 120.3mm	Door width - 120.3mm
AF016	Door width - 19.3mm	Door width - 42.3mm
AF017	Door width - 42.3mm	Door width - 42.3mm

*red denotes different length for front and back